


Sill Plate Top Anchor Installation

STEP 1

Use the jig to drill pilot holes, then install hanger bolts.

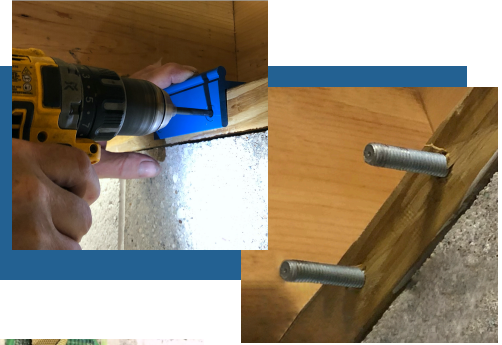

STEP 2

Follow the guidelines on the sticker to wrap kevlar strap around the back of the anchor.

Apply epoxy to the back of the pad.

Hold the top anchor in place to the bolts, pull kevlar strap tight and adhere black pad to strap.



STEP 3

Loosely attach nuts to front of the anchor

Drill the screws into the top anchor leaving about 1/4" gap, the anchor should be positioned on an angle as shown in the image.



STEP 4

Tighten Front bolts and top screws until Strap is fully tensioned. Top of Anchor should be firmly against the sill plate, front of anchor should have approximately a 1/2" gap between front of sill plate as shown.

