GRID STITCH
MADE BY FORTRESS

Installation instructions
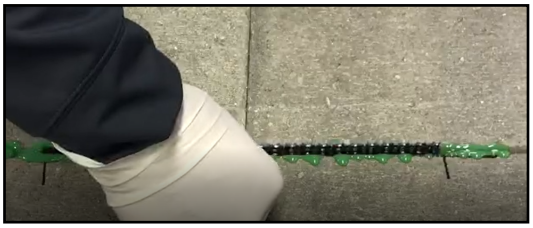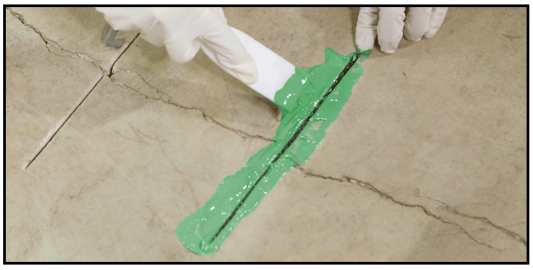
1. Prepare the area
    1.1. If uneven surfaces, you may need to surface grind to level the area
2. Layout the Power Grid Stitch
    2.1. Lay the stitch perpendicular across the crack
    2.2. Mark a line along the long end of the stitch
    2.3. Space out and mark your stitches 8-12” apart
3. Cut the slot
    3.1. Cut a slot minimum 1/8” wide 1” deep at each location
    3.2. Vacuum any remaining dust and debris from the area
    3.3. Dry fit the stitch to be sure the entire stitch is below the surface
4. Epoxy in place
    4.1. Fill the slot with epoxy
5. Install Power Grid Stitch
    5.1. Install the Power Grid Stitch into the slot
    5.2. Use a putty knife to fill in and smooth the surface and remove excess
    5.3. Add more epoxy if needed and finish with putty knife
    5.4. At this time you may apply aggregate top coat
6. Cure Time
    6.1. Four Hours at 70 degrees Fahrenheit for primary cure
    6.2. Full cure is 24 hrs at 70 degrees Fahrenheit
    6.3. Once primary cure is established the area can be prepped and finish coated